
This document provides the specification and installation instructions for a Sher-Color Web label printer. It describes the steps required to connect and install the Dymo LabelWriter 450 label printer for use with the Sher-Color Web application.

Computer and Printer Specification

- Dymo LabelWriter 450, part number 1752264.
- Windows 7 or greater operating system. (Mac operating system scheduled 4 Q 2017).
- <u>Label printer must be USB connection only.</u>

Printer Installation Instructions


- 1. Problems or need assistance with the label printer installation? Call the Sher-Color National Support Center at 216-566-2097.
- 2. Unpack the printer and place near the computer.
- 3. Plug in the label printer power brick and cord into the wall outlet.
- 4. Plug the barrel connector of power brick and cord into the label printer. The indicator light will initially display a **blinking blue** prior to final set-up.
- 5. Connect the USB block connector to the label printer. **DO NOT CONNECT THE PRINTER USB CABLE TO THE COMPUTER USB PORT AT THIS TIME!** After the driver software is successfully installed, you will be asked to connect the printer to the PC.
- 6. Install the label roll in the label printer. Follow the instructions inside the printer for proper installation of labels. The indicator light turns to **solid blue** when set-up correctly.
- 7. Obtain the latest print driver software from the Dymo website for your appropriate version of Windows. Currently the site URL is http://www.dymo.com/en-US/dymo-user-guides.
- 8. Download "DYMO Label v8.6.1" for your appropriate Windows version.
- 9. Locate the downloaded driver file for the computer.
 - The location may be indicated at the bottom of your browser as file is downloaded.
 - The C:\Users\<your user id>\Downloads folder is the default Windows download location. The file will be named "DLS8Setup.8.6.1.exe" or similarly, where the numeric values represent the driver version number.
- 10. **Double click** on the **download file icon** to start the driver installation.

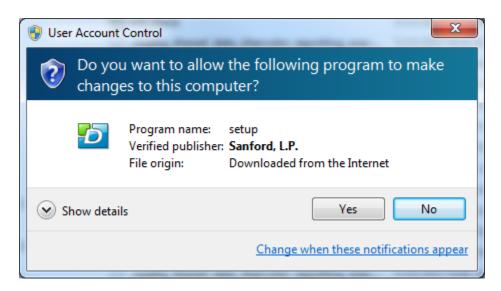


11. The User Account Control window displays. Click the [YES] button.




12. The **Select Language** window displays. Select the appropriate language. Click the **[OK]** button.

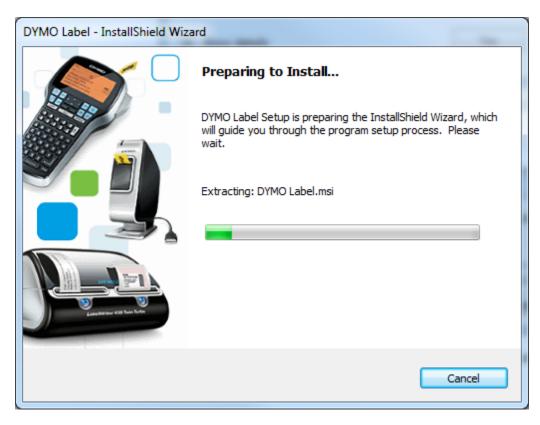


13. The **Preparing To Install** window displays. This begins the printer initial specification phase of the installation.

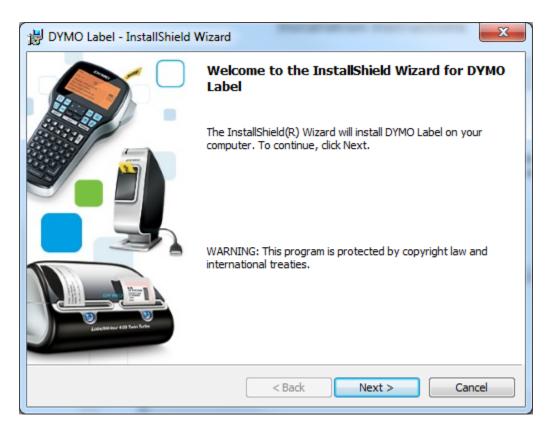


14. The **Welcome** window displays. Click the **[Next]** button to continue.

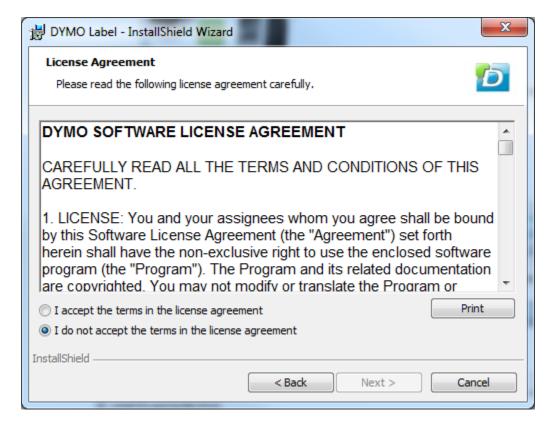


15. The License Agreement screen displays. Read the license agreement carefully and if in agreement, click the radio button next to "I accept the terms in the license agreement." The [Next] button will become active. Click the [Next] button.

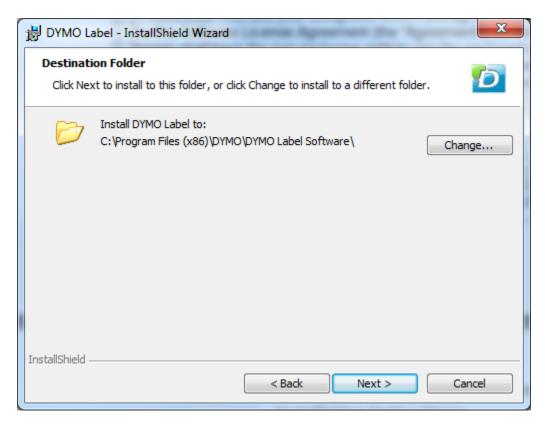


16. Accept the default file directory location and click the [Next] button.

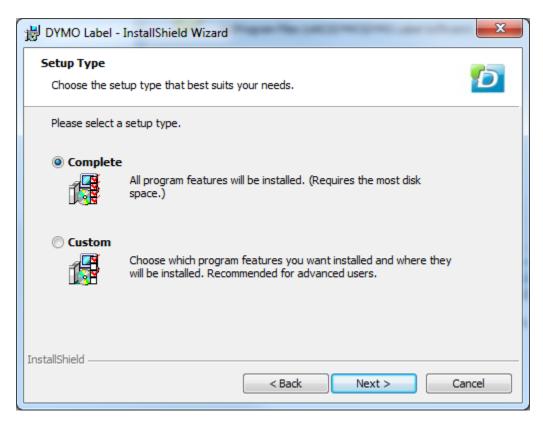

17. Accept the default **Complete** setup type and click the **[Next]** button.

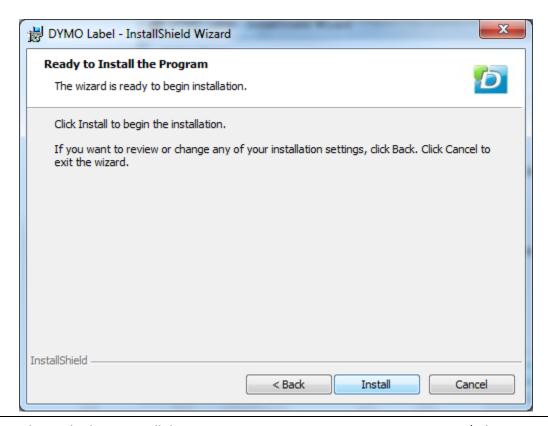


18. All items for needed for the printer installation have been selected. Click the **[Install]** button to continue.

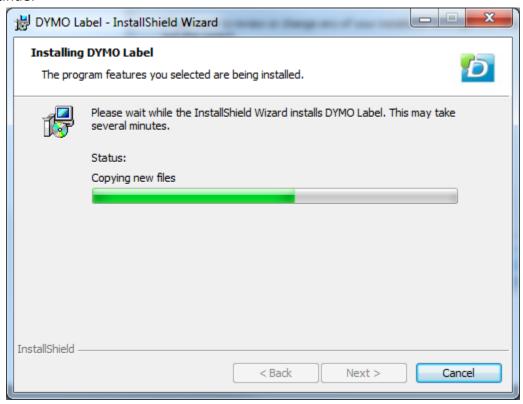

19. The installation will begin. Status will be displayed as the drivers are installed. This step will take several minutes.




- 20. The **DYMO LabelWriter 450** driver setup is complete. You may now connect the printer USB cable to a computer USB port.
- 21. Click the [Finish] button to finalize the installation process.

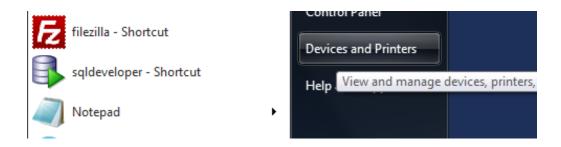


22. Check the printer specifications after installation. Click the [Windows icon] in the lower left corner of Windows task bar. Click [Devices and Printers] button/menu choice to display Devices and Printers window.




23. The **DYMO LabelWriter 450 printer** icon displayed in the **Devices and Printers** window indicates the label printer has been installed successfully.

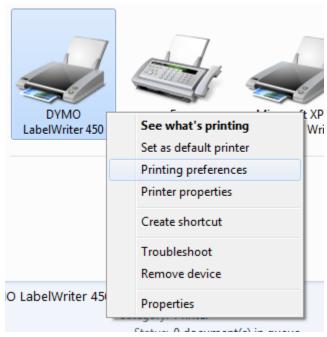

24. Right click on the **DYMO LabelWriter 450 printer icon** and click **[Printing Preferences]** menu choice.

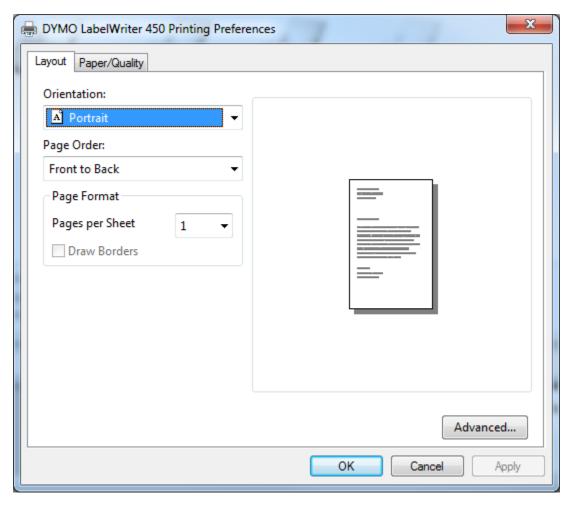

25. The [Layout] tab in the Window displays. Click the [Advanced] button.

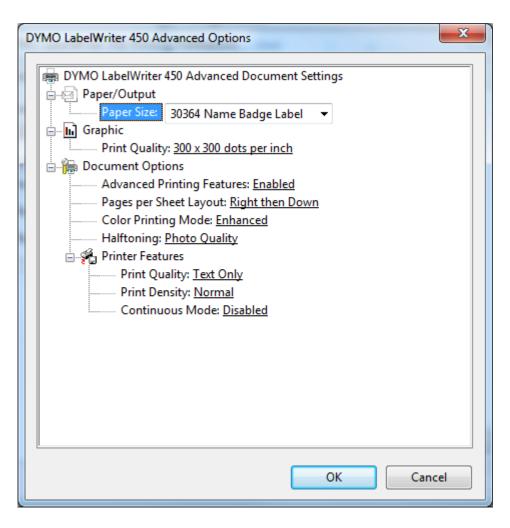

- 26. Confirm that the paper size is **30364 Name Badge Label** (NOT SURE IF THIS IS THE CORRECT/BEST LABEL TO USE CORRECT SIZE). Adjust the paper size using the dropdown menu if needed. Click the **[OK]** button. Click the **[OK]** button on the Printer Preferences screen to finalize the modification.
- 27. Test printing using Sher-Color Web application.